


Dwg. KG4.4.12.09

Model KG4 B
Version 1.2
13 Dec 2017

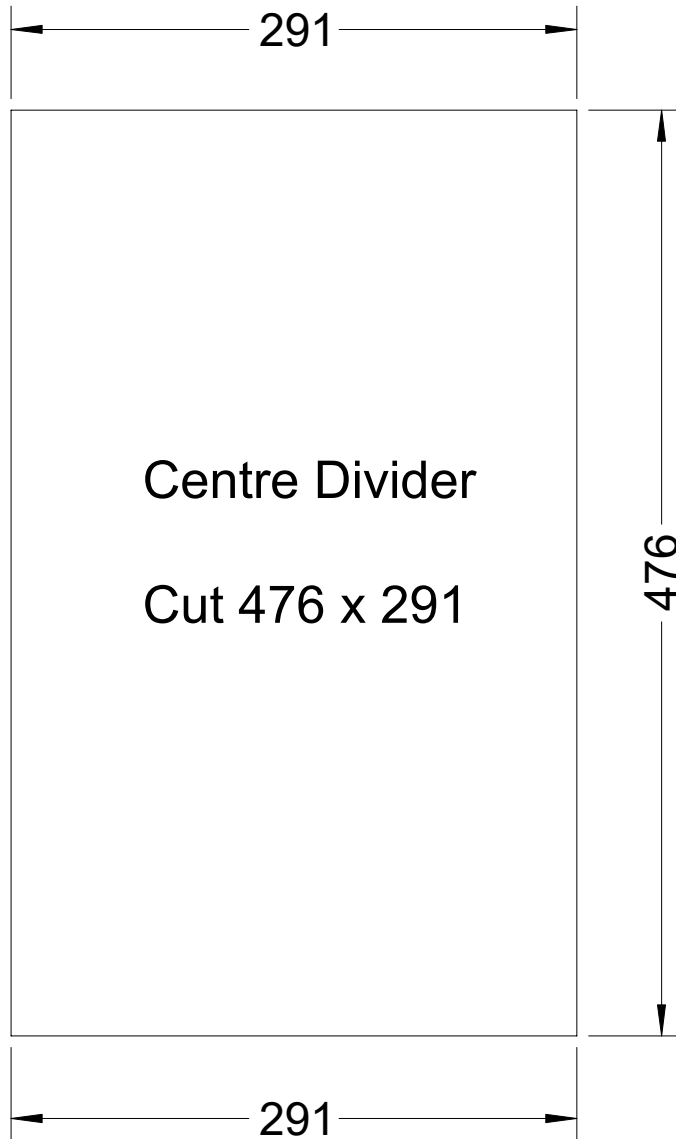

C Pemberton-Pigott

Note:

This divider should be welded into position after the bricks are stacked into place.

Press the bricks against the back of the door end then press this part against the bricks and weld it into position.